
# HUMAN VIBRATION METER



larsondavis.com/human-vibration | 1 716 926 8243

## HVM200 HUMAN VIBRATION METER

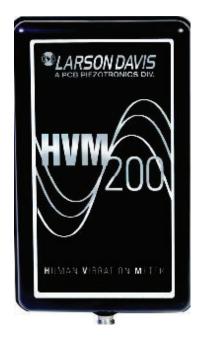

### **FEATURES**

- Control and view data from a mobile app (Android<sup>™</sup> or Apple iOS)
- Removable micro SD memory card
- USB 2.0 and Wi-Fi
- Replaceable lithium battery
- ISO 8041:2005 compliant
- Three measurement channels

#### **APPLICATIONS**

- Hand-arm vibration measurement to ISO 5349
- Whole body measurement to ISO 5349
- General vibration measurement

#### **WORKER SAFETY & PRODUCT TESTING**

The HVM200 is a small rugged vibration meter with built in Wi-Fi that can be used to measure hand-arm, whole body and general vibration. It includes the metrics and frequency weightings needed to measure human vibration. This 3 channel meter meets the requirements of ISO 8041:2005 and it is designed to measure per ISO 2631-1, 2 & 5 and ISO 5349 in support of the American Conference of Governmental Industrial Hygienists (ACGIH) Threshold Limit Values (TLVs) and the directive 2002/44/EC. This makes the HVM200 an ideal choice for an instrument used to demonstrate compliance with human vibration requirements and regulations worldwide.

#### WIRELESS MOBILE INTERFACE

Leverage the power of wireless portable electronics to make measuring human vibration easy. Our free app available on Google Play<sup>™</sup> and the Apple App Store can be used to improve the way measurements are made by using portable electronics to control the measurement and view data.

#### 1/1 AND 1/3 OCTAVE FILTERS (OPTIONAL)

Determine the frequency content of measured vibration levels by configuring the HVM200 with the optional IEC 61260 class 1 compliant 1/1 and 1/3 octave filters (0.5 Hz to 2000 Hz and 0.4 Hz to 2500 Hz respectively). Data can then be transferred for reporting or further analysis using USB, Wi-Fi or a removable micro SD memory card.

#### **RECORD SAMPLED TIME DOMAIN DATA (OPTIONAL)**

Because the HVM200 supports a large removable micro SD memory (up to 32 GB), it is now possible to store and archive the sampled time data for all three channels. Data is stored in a 24-bit format and files can be read with tools such as Matlab<sup>®</sup> or GNU Octave for additional processing.

INCLUDED ACCESSORIES		
PSA035	Universal AC to USB power supply with USB cable (CBL218) and plug adaptors	
BAT018	User replaceable 2250 mAh rechargeable battery that will power the HVM200 continuously for 8 to 12 hours	
CBL217-01	One foot (30 cm) cable for connecting sensors	
SD Card	8 GB removable memory micro SD flash memory card for data storage	



## SOFTWARE SOLUTIONS

#### **APP BASED CONNECTIVITY**

Your smartphone or other portable electronic device can now become the keypad and display for the HVM200 using our app for smartphones and tablets to control and view data. By default the HVM200 is configured to provide its own network through a hotspot to ensure that you always have a network, you can communicate with the HVM200 by connecting your phone to the HVM200 hotspot.

Alternatively, the HVM200 can be configured to be part of an existing Wi-Fi network and it will automatically find and connect to configured networks. After connecting your mobile device to the same network, the app will automatically find all HVM200 devices on the local network and allow them to be controlled and results viewed. Download the LD Atlas<sup>™</sup> app for free – available on Google Play<sup>™</sup> and the Apple App Store<sup>®</sup>.

- Manage instrument setups
- Calibrate and check calibration
- Run and stop measurements
- View data except 1/1 and 1/3 octave data
- Schedule measurements

View files

Manage Wi-Fi connections

#### LD G4 UTILITY: REPORTING & ANALYSIS SOFTWARE

 
The LD G4 Utility Model SWW-G4-HVM for PC supports the HVM200 allowing you to connect, control, download, and view data from multiple devices simultaneously. View your data graphically and in spreadsheet format, generate reports, and easily export in Excel® format for further data analysis. Using LD G4 with the HVM option enabled, you can graphically modify data and the software will automatically recalculate metrics based upon your inputs to deliver a "What If" analysis.

- Instrument setup and control
- Perform "what-if" analysis by editing data and recalculating results
- Data download (HVM100 or HVM200)
- Print reports with resulting metrics
- View time history in tabular or graphical formats
- Export data and archives

 
#### **SOFTWARE DEVELOPMENT KIT**

When you need to write your own software or integrate the HVM200 into existing software, we offer a software development kit, SDK, to facilitate the development. The HVM200 API is based upon http, html and JSON so command and responses are plain text and highly portable; which makes software development much easier. A DLL with a C-sharp API is also provided with the SDK in order to access data in files.









## HVM200 APPLICATIONS

#### **MEASURING HUMAN VIBRATION**

Both whole body and hand-arm vibration can be a significant source of injury risk in the workplace. Effects of human vibration range from Hand-Arm Vibration Syndrome to lower back, neck, and shoulder issues. Vibration experienced in workplaces such as dental offices, mining operations, construction sites, industrial plants, and more should be taken seriously. When an employer suspects workers are being harmed by vibration, the best way to ensure safety is to measure the vibration to which the worker is exposed throughout a typical work day.

Tool and equipment manufacturers may publish vibration values, but in practice the vibration experienced by the user can vary widely depending on the condition of the tool, tool accessories (such as drill bits), the type of work surface, the worker's posture or technique, or other factors. The best way to determine if a particular tool is safe for a given user in a given situation is to measure the vibration with a human vibration meter.

#### **HAND-ARM VIBRATION**

Compliance with hand-arm vibration requirements in directive 2002/44/EC and other national standards can be measured according to the method specified in ISO 5349-1 and 5349-2 using the HVM200. The HVM200 can also be used to determine tool specific vibration levels using methods specified in ISO 28927 and ISO 20643. Hand-arm vibration is always measured using the Wh weighting which is automatically set by the HVM200 when selecting hand-arm measurement mode.

 
#### **WHOLE-BODY VIBRATION**

Use the HVM200 with the SEN027 seat pad to measure whole body vibration as specified in the ISO 2631 series of standards. User definable weighting factors (default is 1.4, 1.4 and 1.0) are used to compute A(8) and VDV. ISO compliant frequency weightings for various whole body measurement situations are built in as seen in the weightings table below.

#### **GENERAL VIBRATION**

Couple the HVM200 with a USB power supply and general purpose accelerometer to create a small and portable vibration data logger. This capability can be used for product testing and production line quality assessments. The HVM200 can also be used to make ISO 4866 measurement of structure vibration and ISO 6954 measurement of ship vibration levels.





HVM200 WHOLE-BODY WEIGHTINGS					
Weighting	Description	Definition			
W <sub>b</sub>	Z-axis vertical vibration	ISO 8041, ISO 2631-4			
W <sub>c</sub>	X-axis, seat back	ISO 8041, ISO 2631-1			
W <sub>d</sub>	X-axis & y-axis, seat surface	ISO 8041, ISO 2631-1			
W <sub>e</sub>	Rotational seat surface	ISO 8041, ISO 2631-1			
W <sub>f</sub>	Motion sickness (vertical)	ISO 8041, ISO 2631-1			
W	Vertical recumbent	ISO 8041, ISO 2631-1			
W <sub>k</sub>	Z-axis, seat surface	ISO 8041, ISO 2631-1			
W <sub>m</sub>	Vibration in buildings	ISO 8041, ISO 2631-2			

## CHOOSE YOUR CONFIGURATION

#### **SENSOR SELECTION GUIDE**

It is important to select an accelerometer that provides the measurement range needed for the vibration environment being tested. An adapter should also be chosen that allows for the measurement of vibration as close as possible to the location where vibration is transferred to the body. For applications where there is a need to measure lower vibration levels, the higher sensitivity SEN041F, 1 mV/(m/s<sup>2</sup>), can be used. The guide below shows recommend sensor and adapter combinations for a variety of common measurement applications.

	HAND-ARM VIBRATION				WHOLE-BODY VIBRATION	GENERAL VIBRATION
Adapter Type	Handle Adapter	"T" Adapter	Clamp Adapter	Palm Adapter	Seat Adapter	
Cable						
	CBL217-01(incl)	CBL217-01(incl)	CBL217-05	CBL216	Included with SEN027	CBL217-05
Sensor	STANS: STANS: STANS: Co	Strange Strange Con	Scharge Billions Vice		09	Y
	SEN040F	SEN040F	SEN040F	SEN026	SEN027	SEN020
	S = 0.1 mV/(m/s <sup>2</sup> )	S = 0.1 mV/(m/s <sup>2</sup> )	S = 0.1 mV/(m/s <sup>2</sup> )	S = 1 mV/(m/s <sup>2</sup> )	S = 10 mV/(m/s <sup>2</sup> )	S = 0.1 mV/(m/s <sup>2</sup> )
	1.0* to 49k m/s <sup>2</sup>	1.0* to 49k m/s <sup>2</sup>	1.0* to 49k m/s <sup>2</sup>	0.1* to 49k m/s <sup>2</sup>	0.02* to 98 m/s <sup>2</sup>	0.1* to 14.7k m/s <sup>2</sup>
Adapter					Included	Included stud mount
	ADP081A	ADP080A	ADP082A	ADP063		
Typical Use	Accelerometer held to the side of the hand	Accelerometer held between fingers	Clamp to handle of a machine	Measure at the palm under a glove	Measure from a sitting or standing position	General purpose

\*When using Wh frequency weighting

#### **ADAPTORS**



"T" Adapter Model ADP080A



Palm Adapter Model ADP063



**Clamp Adapter Model ADP082A** 



Handle Adapter Model ADP081A

#### **OPTIONAL ACCESSORIES**



#### Arm Band

Model CCS048-L & CCS048-S The CCS048 arm band allows the HVM200 to be attached to the forearm of a worker when making hand-arm vibration measurements. With the delayed start feature measurements can be made by a single person. Available in small and large sizes.



Hand-held Shaker Model 394C06 The 394C06 shaker will output 1 g (9.81 m/s<sup>2</sup>) at 159.2 Hz. Supporting sensors up to 7.4 oz (210 gm) the 394C06 is an excellent choice for field verification of system setup and functionality.



#### Hard Shell Case Model CCS047

Provides storage and transport protection for HVM200 with sensors and accessories. Case measures 15 x 19 x 7 inches (38 x 48 x 18 cm) and has a durable, hard shell designed for long term, industrial usage.



Portable Vibration Calibrator Model 9210D

Meet not only the "in-situ" requirements of ISO 8041 "Human response to vibration – measuring instrumentation" but also achieve mechanical "verification testing" requirements.

## MORE INDUSTRIAL HYGIENE SOLUTIONS

#### **SPARTAN™ NOISE DOSIMETER**

MODEL 730

The Spartan Noise Dosimeter Model 730 is designed to make worker noise dose measurements easy and fast. With Spartan, control test setup and measurements directly from the Larson Davis Atlas<sup>™</sup> mobile app. All essential tasks can be completed from your iOS<sup>™</sup> or Android<sup>™</sup> device.

LD Atlas offers interference-free monitoring using low-energy Bluetooth, ensuring that you get the valuable data you need the first time. When a test is complete, Spartan communicates with LD Atlas to download the data which is viewable directly from a phone or tablet. Generate reports, including the full data file, from the mobile interface before sharing via email. Spartan Noise Dosimeters are available in 1-, 3-, 5-, and 10-packs.

- Truly wireless with wireless charging and Bluetooth communication
- Options to connect via USB
- Full control and live monitoring via LD Atlas app
- Download and view measurements, generate and share pdf reports on-the-go from the app
- Automatically connect and download data via G4 LD Utility software
- Built-in bump and motion detection
- Optional Event Sound Recording (730-ESR)
- Optional 1/1 Octave filters (730-0B1)

#### WORKPLACE SOUND LEVEL METER

MODEL SOUNDTRACK LxT®

The SoundTrack LxT Sound Level Meter was developed to meet the unique needs of those involved in workplace noise exposure assessment and plant noise surveys. It is fully compliant with IEC and ANSI standards for Class 1 or Class 2 sound level meters. In addition, LxT files are fully compatible with the ISO 9612:2009 measurement strategies for task or job-based measurements. Organize your sampling methodology and annotate noise survey data to save time and provide better results.

- Large, bright, high-contrast LCD Screen
- Simple one-handed operation
- Real-time 1/1 and 1/3 octave bands (optional)
- Digital voice annotation (optional)
- Store measurements in a single file for easier data management with measurement history (optional)







GENERAL SPECIFICATION	8			
Input				
Input	ICP <sup>®</sup> , IEPE or CCP			
Excitation Current	2 mA			
Input Connector	1⁄4 – 28 4-pin male			
Input Linear Range				
Fc Weighting	0.2 mV to 5.0 V at 80 Hz			
Wh Weighting	0.9 mV to 5.0 V at 16 Hz			
Bandwidth	0.4 Hz to 3 000 Hz			
Range	Single range			
Calibration	TEDS or manual entry			
Overload Indicator	LED on HVM200 and icon in app			
Sample Rate	7161.458 Hz			
Measured Values	1			
Measurement Modes	Hand-arm, Whole-body, Vibration			
Metrics by Mode				
Vibration	RMS, Peak, Min, Max (x, y, z, & Σ)			
Hand-arm	RMS, Peak, Min, MTVV, A(1), A(2), A(4), A(8) (x, y, z & Σ)			
Whole-body	RMS, Peak, Min, MTVV, A(8), A(8)Exp, EP, VDV (x, y, z & Σ)			
Frequency Weightings				
Vibration	Fa (0.4 Hz to 100 Hz), Fb (0.4 Hz to 1250 Hz), Fc (6.3 Hz to 1250 Hz)			
Hand-arm	Wh			
Whole-body	Wb, Wc, Wd, We, Wf, Wj, Wk, Wm			
Measurement Units	m/s², cm/s², ft/s², in/s², g, dB			
Time History (Logging)	,			
Storage Interval	1, 2, 5, 10, 20, 30 s; 1, 2, 5, 10, 20, 30 min; 1hr			
Stored Values	RMS and peak for x, y, z & Σ			
1/1 and 1/3 Octave Filters (O	ptional)			
1/1 Octave Filters	0.5 Hz to 2000 Hz			
1/3 Octave Filters	0.4 Hz to 2500 Hz			
Weighting	Unweighted			
Measured Values	RMS, Max			
Compliance	IEC 61260-1:2014 Class 1			
Power Supply				
Internal Battery	Rechargeable Li-ion, user replaceable			
Charge Time	3.5 hours using PSA035			
Battery Run Time				
Connect to Wi-Fi	12 hours			
Access Point (AP)	9 hours			
Communication Interface				
Communication	USB and 802.11 b/g WiFi			
Physical				
Dimensions	4.6 x 2.6 x 0.7 in. (118 x 67 x 18 mm)			
Weight (Including Battery)	4.6 oz. (130 gm)			
Environmental				
Operating Temperature	14 °F to 122 °F (-10 °C to 50 °C)			
Operating Humidity	0 to 90% relative humidity, non-condensing			

GENERAL SPEC	IFICATIONS (CONTINUED)				
Compliance					
ISO 8041:2005 Human response to vibration - Measuring instrumentation					
IEC 61010-1 (2010) Safety					
IEC 61326-1:2013					
IEC 61325-2-3:20	13 EMC safety				
ISO 2631-1:1997	Whole-body vibration – General requirements				
ISO 2631-2:2003	ISO 2631-2:2003 Whole-body vibration – Vibration in buildings				
ISO 2631-4:2001 Whole-body vibration – Rotational motion					
ISO 2631-5:2004	ISO 2631-5:2004 Whole-body vibration – Vibration containing shocks				
ISO 5349-1:2001	Hand-transmitted vibration – General requirements				
ISO 5349-2:2001	Hand-transmitted vibration – Practical guidance				
EN 1032:2003 Me	chanical vibration – Testing of mobile machinery				
ANSI S2.70					
ORDERING INFO	DRMATION				
HVM200	3-channel vibration meter for general and human vibration. Includes CBL217-01. Sensors not included				
HVM200-HA-40F	Kit for hand-arm vibration includes HVM200, CCs047, CCS048-L, ADP081A, SEN040F & SWW-G4-HVM				
HVM200-WB	Kit for whole body vibration includes HVM200, CCS047, SEN027 & SWW-G4-HVM				
HVM200- All-40F	Kit for hand-arm and whole body vibration includes HVM200, CCS047, CCS048-L, ADP081A, SEN040F, SEN027 & SWW-G4-HVM				
HVM200-0B3	Option for 1/1 and 1/3 octave filters. Includes SWW-G4-HVM				
HVM200-RAW	Option to record sampled waveforms for all three channels				
SWW-G4-HVM	G4 license to add support for HVM100 and HVM200 that can be installed concurrently on up to five computers				
SWW-G4-SDK	Software Development Kit				
<b>Optional Accesso</b>	ries				
CBL216	1/4 – 28 4-pin to 4-pin mini connector for SEN026				
CBL217	1⁄4 – 28 4-pin to 1⁄4 – 28 4-pin, 5 ft (1.5 m) cable				
CBL237	14 – 28 4-pin to three 10-32 plugs for SEN033 cable. Available in 5, 10 & 20 ft (1.5, 3 & 6 m)				
SEN033	Single axis seismic accelerometer, 1000 mV/g, ICP, 50 gm, 0.06 to 450 Hz, 10-32 top connector with TEDS. Use with CBL237				
SEN034	Triaxial accelerometer for seismic, 1000 mV/g, ICP, 0.5 to 3000 Hz, ¼ – 28 4-pin connector with TEDS. Use with CBL217				
SEN041F	Triaxial accelerometer, 1 mV/(m/s $^2$ ), for ADP080A, 81A and 82A				
CCS047	Hard shell case for HVM200 and accessories				
CCS048-S	Small arm band for HVM200, fits arm circumference of 8 in to 12.5 in (20 to 32 cm)				
CCS048-L	Large arm band for HVM200, fits arm circumference of 10.5 in to 16.5 in (27 to 42 cm)				
394C06	Hand-held shaker, 9.81 m/s² at 159.2 Hz				
CER-HVM200 Factory calibration of HVM200, does not include sensor					





3425 Walden Avenue, Depew, NY 14043 USA

larsondavis.com | sales@larsondavis.com | 888 258 3222 | +1 716 926 8243

© 2021 PCB Piezotronics - all rights reserved. PCB Piezotronics is a wholly-owned subsidiary of Amphenol Corporation. Endevco is an assumed name of PCB Piezotronics of North Carolina, Inc., which is a wholly-owned subsidiary of PCB Piezotronics, Inc. Accumetrics, Inc. and The Modal Shop, Inc. are wholly-owned subsidiaries of PCB Piezotronics, Inc. MI Sensors and Larson Davis are Divisions of PCB Piezotronics, Inc. Except for any third party marks for which attribution is provided herein, the company names and product names used in this document may be the registered trademarks or unregistered trademarks of PCB Piezotronics, Inc., PCB Piezotronics of North Carolina, Inc. (d/b/a Endevco), The Modal Shop, Inc. or Accumetrics, Inc. Detailed trademark ownership information is available at www.pcb.com/trademarkownership.