

QuickStart

Spartan™ Noise Dosimeter



 **LARSON DAVIS**
A PCB PIEZOTRONICS DIV.

Model 730

1 Install Software

LD Atlas™ App



G4 LD Utility for PC



2 Enable Bluetooth

a) Insert Bluetooth Dongle in PC



b) Enable  on Mobile Device
(No Pairing Required)



3 Power On

Press & Hold




4 Begin Auto-Calibration

a) Remove



c) Power On

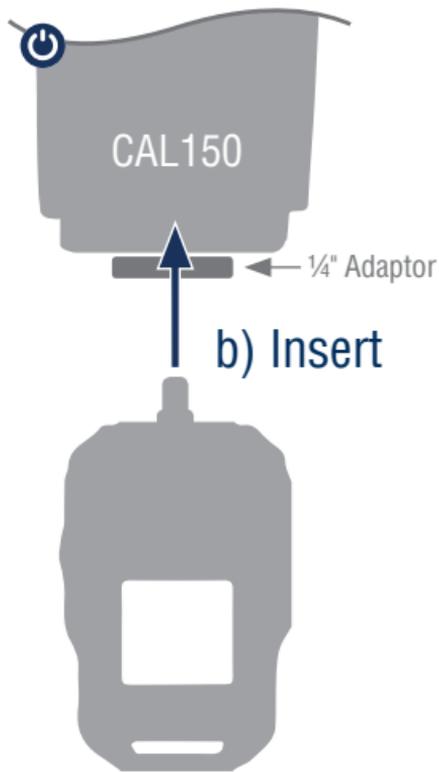


b) Insert

5 Charge


a) Connect to Power Source

Wireless
Charging Case

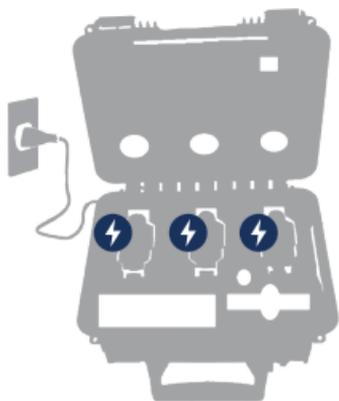

USB to PC

Or

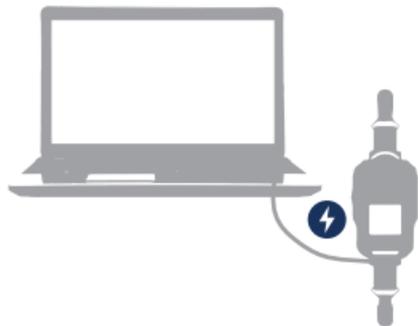

6 Configure a Measurement



(as shown)

Or



a) Select your meter in the Meters panel



b) Select the Configuration icon



c) Input your criteria

7 Make a Measurement via App...



a) Select Stop/Start indicator  / 



a) Select your meter in the Meters panel

b) Select View icon 

c) Select Stop/Start indicator  / 

...Or via Meter


To start a measurement

- Hold 
- Press 
- Press 

To stop a measurement,
repeat sequence

To exit any menu

- Quick Press  

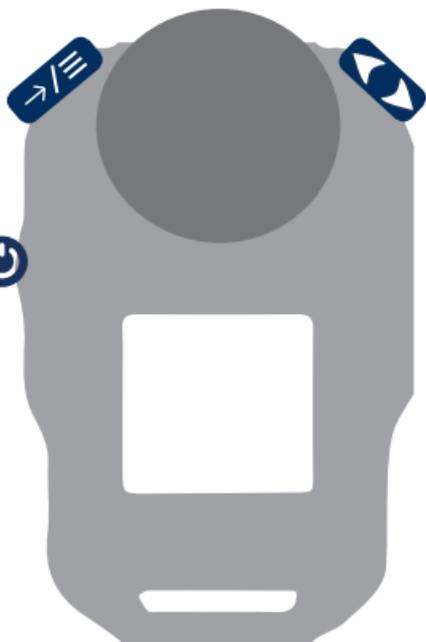


8 View Data, Reports

a) Select your meter in the Meters panel




b) Double-tap to download file
auto-download (G4 only)

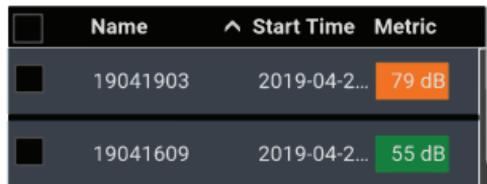

<input type="checkbox"/>	Name	Start Time	Metric
<input type="checkbox"/>	19041903	2019-04-2...	79 dB
<input type="checkbox"/>	19041609	2019-04-2...	55 dB

c) Double-tap to open file

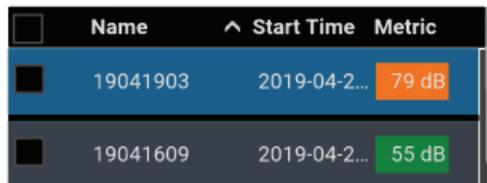

<input type="checkbox"/>	Name	Start Time	Metric
<input type="checkbox"/>	19041903	2019-04-2...	79 dB
<input type="checkbox"/>	19041609	2019-04-2...	55 dB

9

Additional Information

More Info

Included USB drive
larsondavis.com

24-hour Technical Support

888.258.3222
716.926.8243

Components

Full list of components for your configuration are included in the product manual, provided on the USB drive

MAN-0323 revNR